

Quantum Selectra-Cast Digital Timer Instructions 6 or 12 Volt *Purchased after June 2005*

Note: Read entire instructions before proceeding.

These instructions explain how to feed at the same times everyday.

The following example is to set a morning feed time at 6:30 AM and an afternoon feed time for 4:00 PM. This example will make the feeder go off at these times all 7 days a week. If you would like your feeder to go off at different times each day, just simply change the hours and minutes accordingly for each step.

Your timer may also be set with either more feed times each day or feed times only on certain days of the week. To do these types of settings, refer to Setting Specific Days for Feeding in these instructions.



First you must set the current time of day:

1 Reset the clock by gently inserting a small object into the reset hole.

2 While holding in the clock button (far left), press the day key to the current day of the week.

3 Remain holding in the clock button while you set the current hour (h+) and current minute (m+). Release the clock button.



Now you will set the feed times:

4 Press and release the timer button one time. The timer should now say "TIMER 1, ON". Press the hour (h+) key until 6 AM is shown.

5 Press the minute (m+) key until :30 is shown. (Adjust these times to your preference.)

6 Make sure that there are all days showing in this timer position if you want the feeder to go off at this time all seven days of the week. If a day is showing, keep pressing the day key until there are all days showing.



7 Press and release the timer button once. The timer should now say "TIMER 1, OFF". Press the hour (h+) key until 6 AM is shown.



8 Press the minute (m+) key until :31 is shown. The OFF time of the same number feed time will always be 1 minute later than the ON time.



9 Make sure that there are all days showing, while in the timer mode, if you want the feeder to go off all seven days a week.



10 Press and release the timer button once. The timer should now say "TIMER 2, ON". Press the hour (h+) key until 4 PM is shown.



11 Press the minute (m+) key one time until :00 is shown. (Adjust these times to your preference.) Make sure there are all days showing.



12 Press and release the timer button once. The timer should now say "TIMER 2, OFF". Press the hour (h+) key until 4 PM is shown.



13 Press the minute (m+) key until :01 is shown. Remember that there should be all days showing in all feed times if you want the feeder to feed at those times all seven days a week.



14 Connect your rechargeable battery. Red wire to red terminal. Black wire to black terminal.



Now test the unit and set the seconds of spin time.

15 Press the clock button (far left) to show the current time and day. The day will always show when you are viewing the current time of day. It's okay!



16 Shield your eyes and press the long bar below the h+ and m+ keys, this is the test key. (You may have to press the test button twice for the unit to spin if the timer was already in the on position.) Count the number of seconds of spin time.




17 If you desire a longer or shorter spin time, turn the knob in the lower left corner of the timer unit to the left for less time, or to the right for more time.



18 Test again by pressing the long bar until you get the spin time correct.



19 Before you leave the feeder always remember to read the red sticker below the timer which reminds you to have the current time of day showing and to press the long bar to read "OFF".

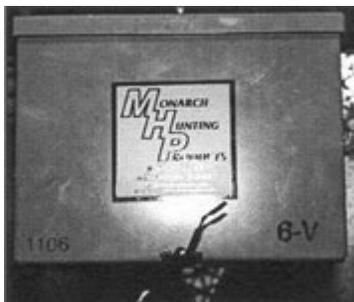

20 Put on the cover lid and secure with a bolt, wire or padlock.

Setting Specific Days For Feeding

If you would like to have any of the feed times feed only on certain days of the week, simply push the day key until the proper day or days are shown for both the "on" and "off" time.

Service Instructions:

If servicing is needed:

1. Detach the controller timer box which includes the motor, time clock and battery.
2. To prevent a loss of feed, merely stuff a rag in the bottom of the feeder.

3. UPS or bring the COMPLETE timer including the box, motor, battery, spinner etc. to:
Monarch Hunting Products, 611 W. Pioneer Parkway, Arlington, Texas 76013.
Do not send individual parts only. Bring the complete lower unit to evaluate.